



Инструкция Vax 6121

[Перейти в карточку товара²](#)



8 800 775 98 98

Получите техническую консультацию.
Круглосуточно. Без выходных



www.sotmarket.ru

Подробная информация о товаре,
отзывы, обзоры и аксессуары




Multifunction **vax 6121**

Vax model number:

6121

6121C

GRADED

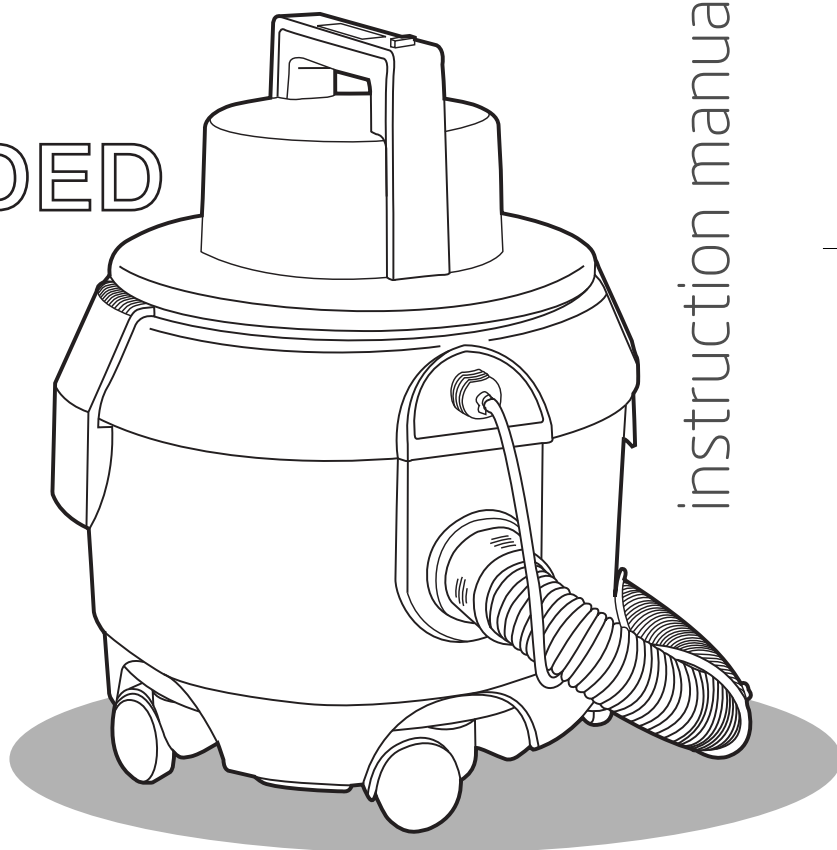

instruction manual

www.vax.co.uk

Please read carefully before using this cleaner.
Always fully extend the mains cable before use.
Retain for future reference.

1. Diagram

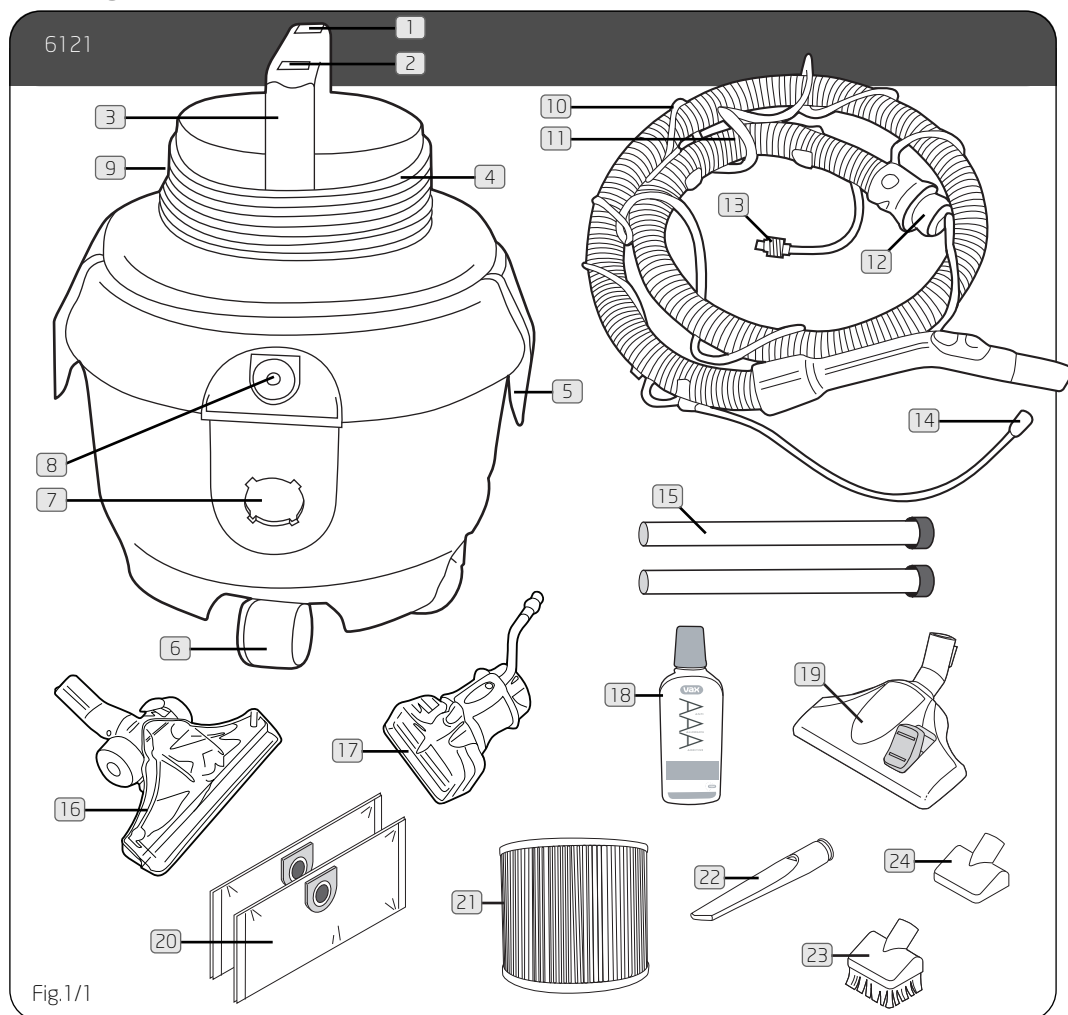


Fig.1/1

- | | |
|-----------------------------|---|
| 1 Water pump button (green) | 13 Solution tube to machine connector |
| 2 Power button (red) | 14 Solution tube to wash head/upholstery tool connector |
| 3 Carry handle | 15 2 x stainless steel extension tubes |
| 4 Power cord | 16 Fibreflow carpet wash head |
| 5 Container release clips | 17 Upholstery wash tool |
| 6 Casters | 18 Vax AAA carpet cleaner |
| 7 Hose connection port | 19 Combination floor head (for dry vacuuming) |
| 8 Solution tube port | 20 2 x paper dust bags |
| 9 Exhaust filter | 21 Filter assembly |
| 10 Hose | 22 Crevice tool |
| 11 Solution tube | 23 Dusting brush |
| 12 Hose connector | 24 Upholstery tool |

2 parts overview

2. Safety Information

FOR HOUSEHOLD USE ONLY.

When using the cleaner, basic safety precautions should always be observed, including the following:

1. Do not leave the machine unattended when plugged in. Unplug it from socket when not in use.
2. To prevent electric shock do not use outdoors.
3. Not to be used as a toy. Children should be supervised to ensure that they do not play with the appliance.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
5. Use only as described in this manual.
6. Do not use with a damaged cord or plug. If the supply cord and/or plug is damaged, they must be replaced by the manufacturer, a Vax Service Agent or similarly qualified persons in order to avoid hazard.
7. Do not pull or carry by the cord, use the cord as a handle, allow the cord to come into contact with hot or sharp surfaces or close a door on the cord.
8. Do not unplug by pulling on the cord.
9. Do not handle the plug or machine with wet hands.
10. Do not put any objects into openings or operate with openings blocked, keep them free of anything that may reduce airflow.
11. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
12. Do not use the machine on any glowing, burning or smoking particles.
13. Do not use without the solution tank and dirty water tank in place.
14. Do not use the vacuum without the dust bag in place.
15. Turn off all controls before unplugging.
16. Do not use to pick up flammable or combustible liquids such as petrol, or use in areas where they may be present.
17. Keep the unit on the floor.
18. Do not use an extension cord.
19. Do not attempt to remove blockages with sharp objects as they may cause damage.
20. Store indoors put away after use to prevent tripping accidents.

21. Using improper voltage may result in damage to the motor and possible injury to the user. The correct voltage is listed on the rating label.
22. A hazard may occur if the machine runs over the power supply cord.
23. To prevent dirty water from running into motor, do not hold the appliance upside-down or lay on its side. Use appliance in normal vacuuming position.
24. Use extra care when cleaning on stairs.
25. Do not carry appliance while motor is running.

NOTE: Carpets should be dry vacuumed thoroughly before washing.

NOTE: The unit must be unplugged from the mains socket outlet after use, and before cleaning or maintaining the unit.



IMPORTANT: This unit is not intended for commercial use.


PLEASE KEEP THESE INSTRUCTIONS FOR FURTHER USE.

3. Vacuuming


⚠ IMPORTANT: Always remove the power plug from the wall outlet before assembling, servicing or removing accessories.

⚠ IMPORTANT: Only the red power button should be "ON" when the machine is in dry vacuuming mode. The green pump button should be "OFF".


1. Unclip Container Release Clips (A) on both sides of machine (Fig.3/1).

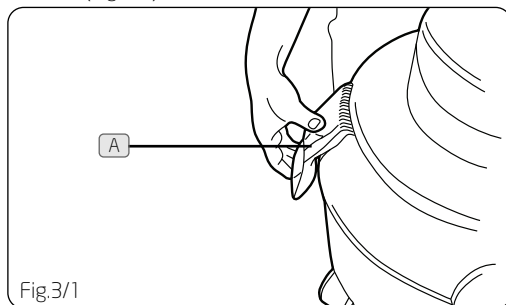


2. Remove the motor top from the unit, turn on its side and remove the float housing in an anti-clockwise direction to unscrew (Fig.3/2).

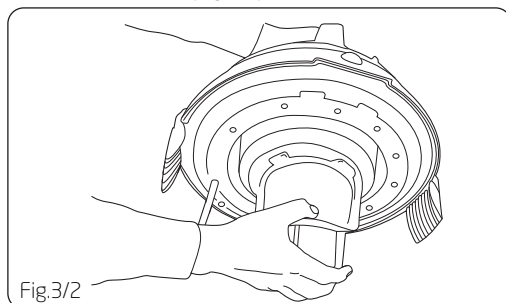


3. Remove the solution connector tube by turning anti-clockwise by 90 degrees. Store in a safe place (Fig.3/3).

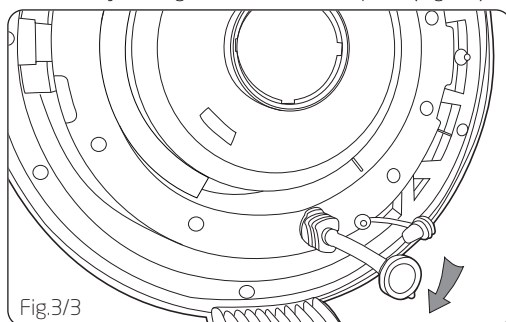


4. Fit the plug to the solution intake port (Fig.3/4).

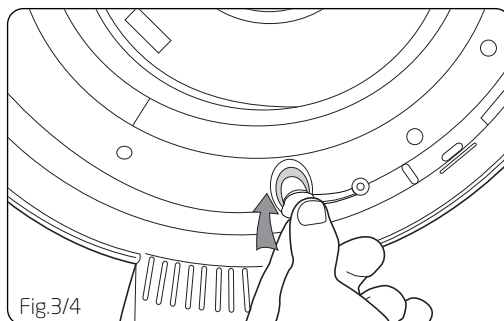


Lift out and remove the clean water solution tank. Store safely away (Fig.3/5).

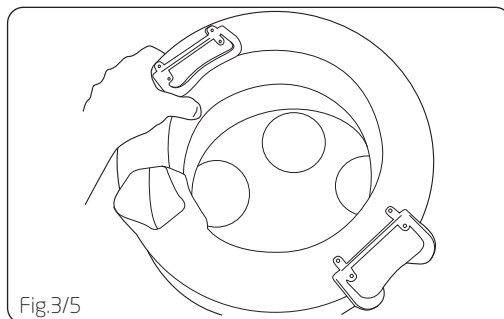


Fit the pleated pre-motor filter by pushing and lightly twisting the filter on the motor top (Fig.3/6).

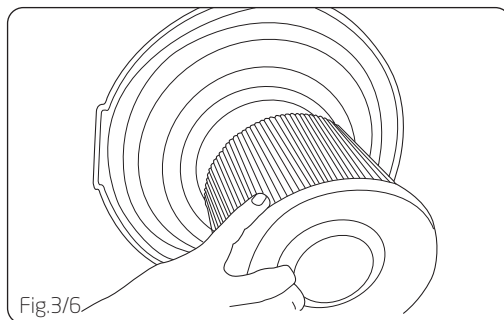


Fit the dust bag by aligning the front of the dust bag with the inlet slots, and position the dust bag to fill the inside of the base (Fig.3/7).

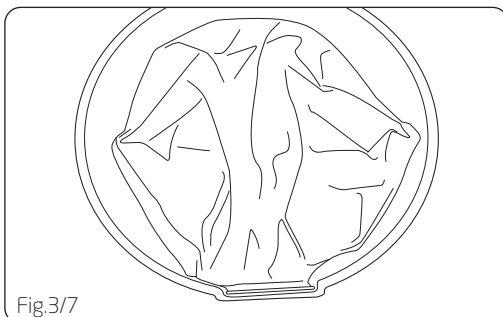


Replace the motor top, ensuring that the dust bag is not trapped. Ensure the motor top is secured to the base with the two clips (Fig.3/8).

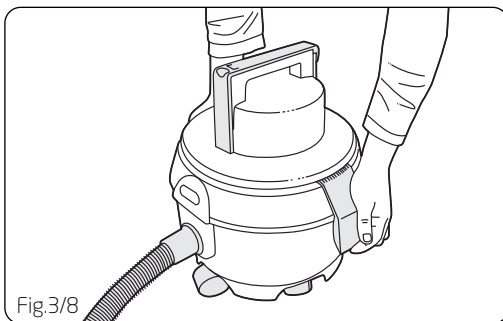


Insert the flexible hose into the inlet on the main body of the vacuum cleaner. Push in and twist clockwise a quarter turn until tight (Fig.3/9).

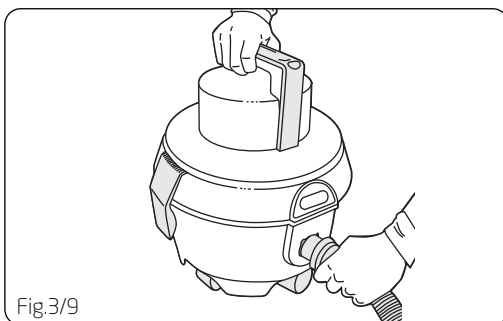

Push the extension tubes onto the end of the handle (Fig.3/10).

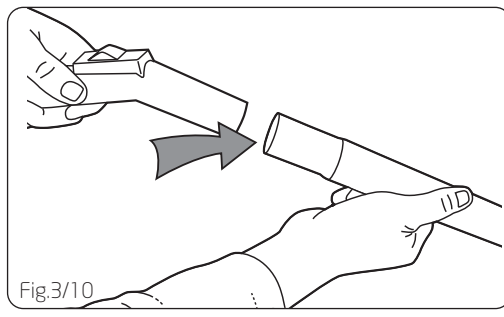


Fit the combination floor tool by pushing on to the extension tube (Fig.3/11).

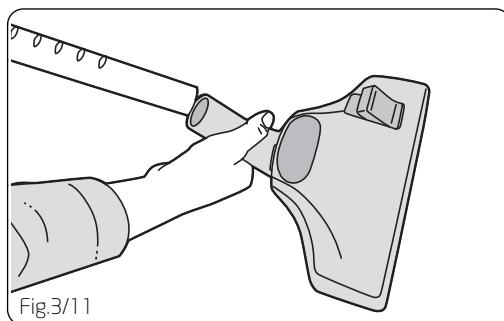

On/Off Button

Fully unwind the power cord and plug the cord into the electrical outlet. Turn the vacuum cleaner on by depressing the button located on the top of the carry handle (Fig.3/12). The vacuum cleaner can be turned off by pressing the on/off button again.

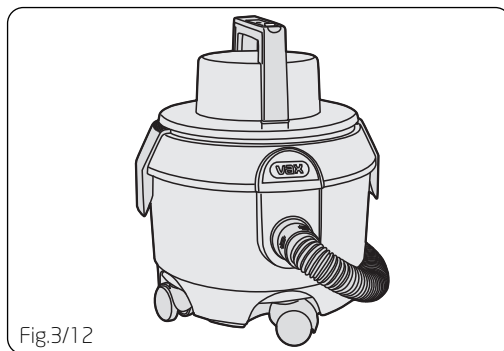

Carpet Cleaning

For carpet cleaning, press the rocker switch on the combination floor tool as shown to raise the brushes (Fig.3/13).

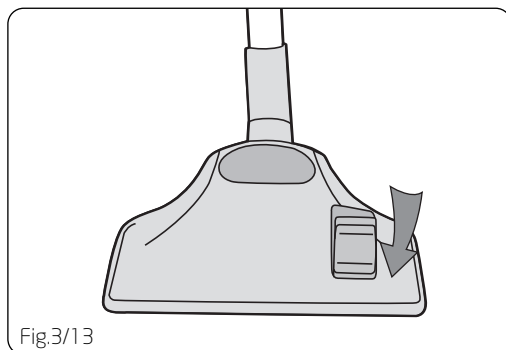


Fig.3/13

Hard Floor Cleaning

For hard floor cleaning, press the rocker switch on the combination floor tool as shown to lower the brushes (Fig.3/14).

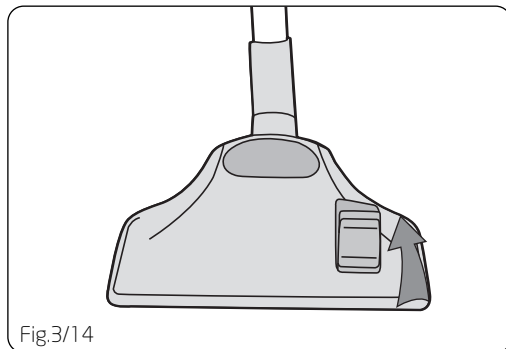


Fig.3/14

4. Accessories

The accessories can be attached directly to the handle by removing the extension tubes and pushing in the desired accessory (Fig.4/1).

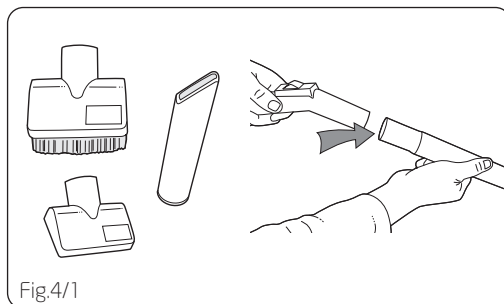


Fig.4/1

The accessories can also be attached to the extension tubes for extra reach. Remove the combination floor tool and push on the desired accessory (Fig.4/2).

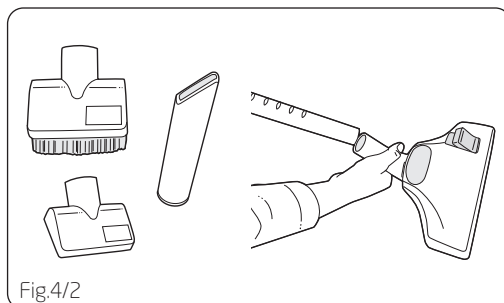


Fig.4/2

Crevice Tool: for crevices, corners, cracks etc.

Dusting Brush: for delicate surfaces.

Upholstery Tool: for carpet, upholstery, stairs etc.

5. Preparing the Carpet for Washing

IMPORTANT: Do not use the cleaner as a dry vacuum when set up in carpet washing mode.

1. Vacuum carpet thoroughly.
2. Remove as much furniture from the room as possible. If unable to remove the furniture, place plastic or foil under and around the legs until the carpet has dried completely.

Helpful hints for cleaning carpet:

1. Only use Vax recommended solution with this machine.
2. Do not oversaturate carpet with cleaning solution while using the machine.
3. For heavily soiled areas, additional applications may be necessary.
4. Allow plenty of time to dry carpet thoroughly.
5. Wipe cleaning solution from woodwork and wood to prevent any damage.
6. Try not to walk on carpet until it is completely dry.
7. After carpet is thoroughly dry, vacuum the carpet using a vacuum cleaner with a revolving brushbar.
8. Before cleaning, determine where to start and end, making sure not to walk over previously cleaned areas.

Check for colour fastness


Before cleaning carpet, test for colour fastness. Dampen a white cloth with solution. Test on a small inconspicuous area prior to washing. Gently rub the cloth over the area. Check each colour for colour bleeding. If the cloth remains clean, it should be safe to clean the carpet.

After cleaning


- Allow carpet to dry completely. Try not to walk on the carpet until it is dry.
- If it is necessary to walk on the carpet, place white towels on the areas to be walked on.
- If the carpet is not dry and the furniture must be placed back in the room, use plastic or foil under the furniture to prevent staining the carpet.
- Thoroughly clean the dirty water tank with warm (max 40°C) tap water.

6. Getting Ready to Wash

1. Unclip Container Release Clips (A) on both sides of machine (Fig.6/1).

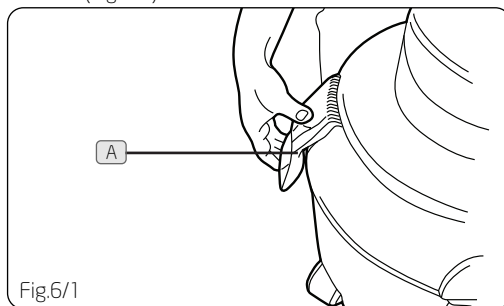

2. Lift off motor container and remove filter assembly. Remove the plug from the solution intake port and replace the solution connector tube. The machine can be used for washing by placing the clean water tank (A) back inside the dirty water tank (B) (Fig 6/2).

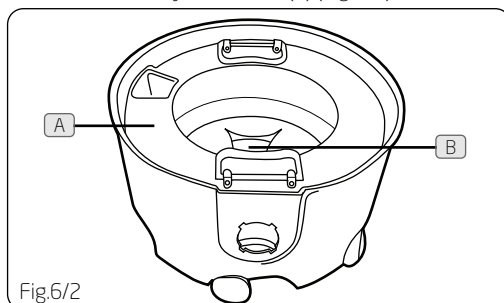

3. Remove Clean Water Tank (A) from inside the Dirty Water Tank and fill with warm (max 40°C) water to point indicated on the tank. Add 1 capful of Vax AAA solution (for carpets) per litre of water (unless otherwise stated on the bottle) (Fig 6/3).



4. Replace Clean Water Tank (A) inside Dirty Water Tank (B) taking care to ensure that the space to allow the dirty water back into the tank is lined up with the Solution Port (C) (Fig.6/4).



Fig.6/4

5. Replace Motor Container (A) ensuring that the Solution Pump Hose (B) is aligned with the hole in the Clean Water Tank (C) so that it goes inside when the Motor Container is clipped back into position (Fig.6/5).

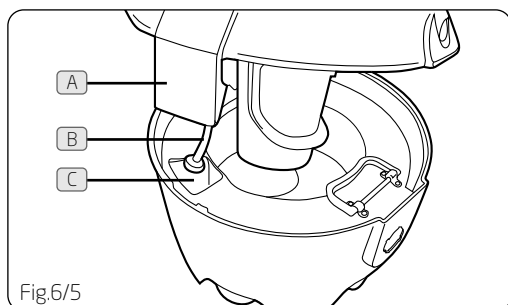


Fig.6/5



WARNING: Machine must not be plugged in during this stage.

7. Assembly

1. Push solution tube to machine connector (A) firmly into Solution Port (A1). Twist solution tube connector (A1) a quarter turn to the right to lock into place (Fig.7/1).

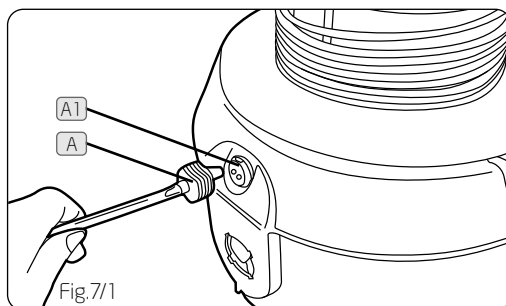


Fig.7/1

2. Push hose connector (B) firmly into Hose Connection Port (B1). Twist to the right until hose connector locks into place (Fig.7/2).

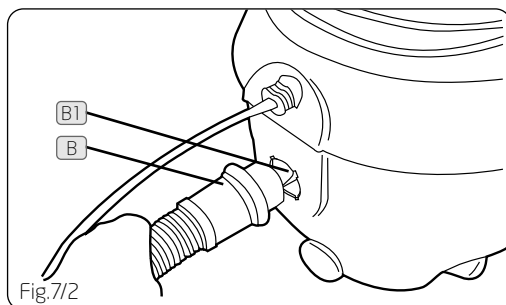


Fig.7/2

3. Push one end of the extension tube into the handle of the hose (Fig.7/3).



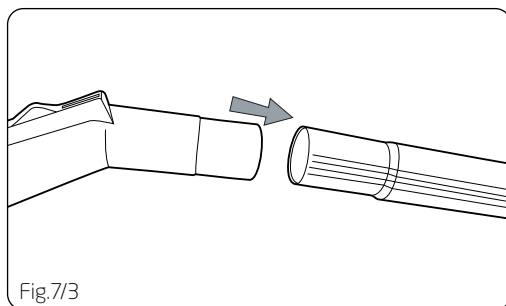


Fig.7/3


4. Wrap Solution Tube (A) around Hose (B). Ensure that the solution tube is wrapped loosely enough to allow the solution to flow freely through the tube (Fig.7/4).

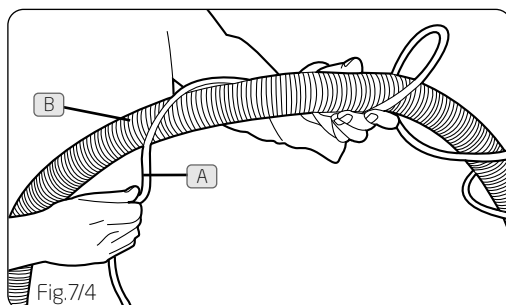

5. After wrapping the tube around the hose, affix Solution Tube (A) to Hose (B) using Clips provided (C) to hold it in place (Fig.7/5).

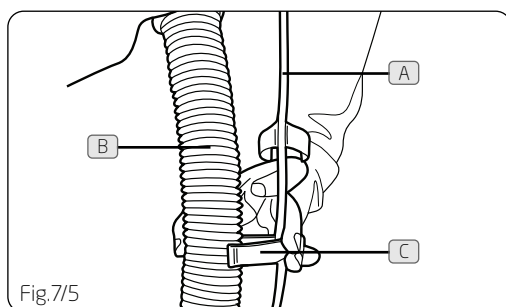

6. Push the second extension tube into the wash head to be used and push the end of the solution tube onto the connection port on the Wash Head / Upholstery Tool (Fig.7/6).

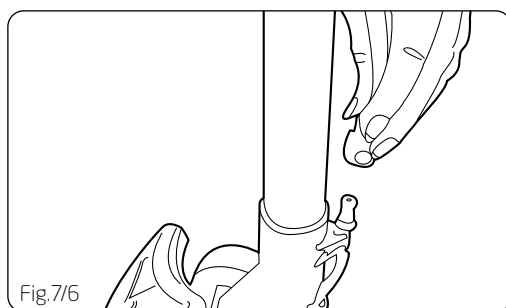


8. Usage


1. Plug in machine to power supply.
2. Press the red button to turn on the power.
3. Press the green button to activate the pump.

Washing Carpets

1. On the Fibreflow wash head ensure that the rocker switch (A) is towards the back of the head to allow water to flow through the head (Fig.8/1).

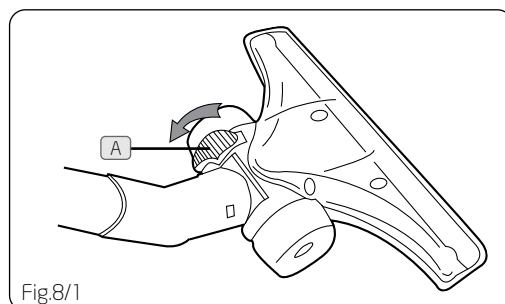


2. In order to help suck up excess water, the rocker switch (A) can be pushed to the front position on the Fibreflow wash head. This will prevent water flow, allowing excess water to be removed (Fig.8/2).

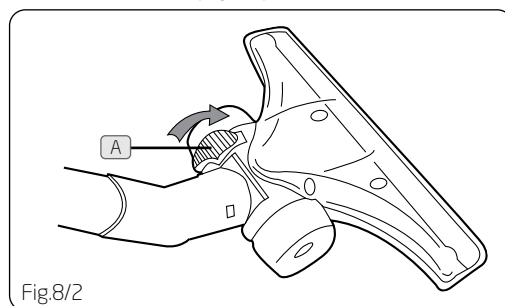

Washing Upholstery

1. Detach wash head from the solution tube and extension tubes.
2. Pull the extension tube out of the handle of the hose.
3. Attach the upholstery wash tool directly onto the handle of the hose (Fig.8/3) and wrap the excess solution tube around as necessary.

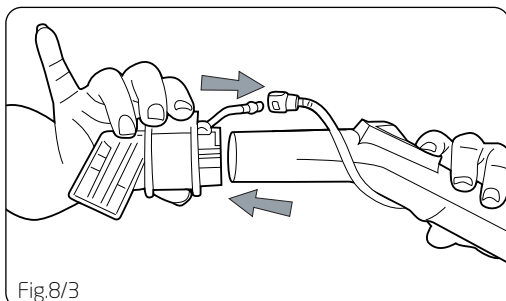

4. To start water and solution flow, push the collar on the wash tool forwards

5. To recover excess water and solution, pull the collar backwards


NOTE: Do not store cleaner with solution in clean water tank or dirty water in dirty water tank. Mineral deposits and mildew can form which will affect the performance of the machine.

9. Dust Bag and Filters: Removal and Replacement


! IMPORTANT: Always unplug the machine from the electrical output before removing the dust bag.

! IMPORTANT: Do NOT use the vacuum cleaner without ALL of the filters in place.


1. Turn off the vacuum cleaner and unplug it from the mains. Remove the hose. Unclip the retainer clips on either side of the vacuum cleaner and lift off to gain access to the dust bag compartment (Fig.9/1).

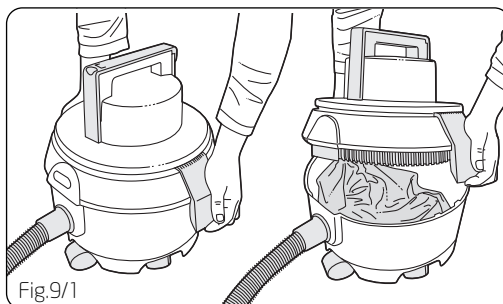

2. Lift out the full dust bag (Fig.9/2).

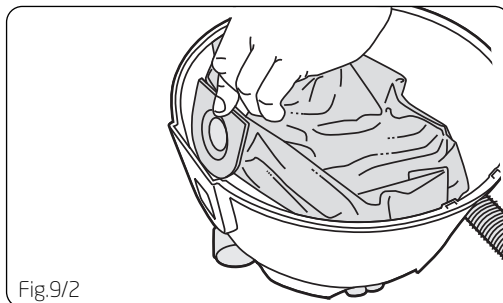

3. Dispose of the full dust bag and insert a new dust bag back into the vacuum cleaner aligning the front of the dust bag with the inlet slots (Fig.9/3).

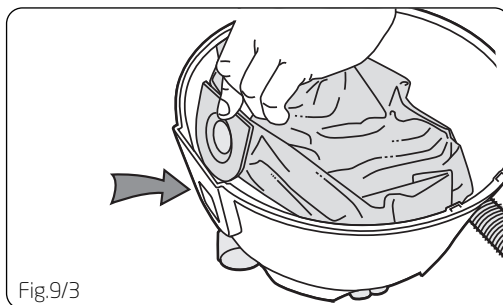

10. Maintenance

⚠ IMPORTANT: Ensure that the machine is switched off and unplugged from the socket before carrying out any maintenance.

Cleaning the Pre-Motor Filter.

1. Remove the motor top from the unit, turn on its side and remove the float housing in an anti-clockwise direction to unscrew (Fig.10/1).

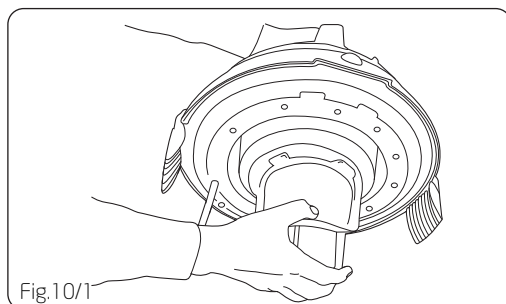


Fig.10/1

2. Remove the blue filter (Fig.10/2) and wash under a tap. Allow to dry thoroughly before replacing back into the machine. Replace with a new filter as necessary.

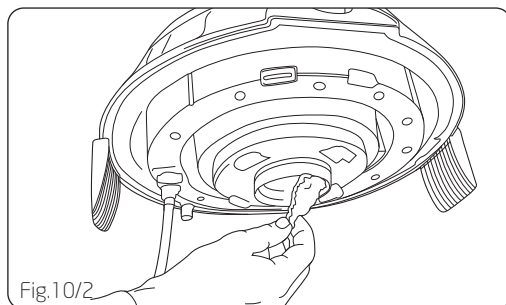


Fig.10/2

3. Turn the float housing in a clockwise direction until secure and place the motor top back onto the unit.

Cleaning the Post-Motor Filter

1. Remove the filter housing at the back of the machine (Fig.10/3).

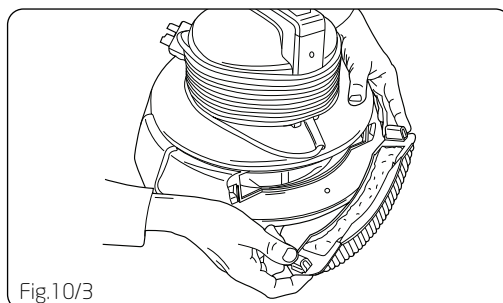


Fig.10/3

2. Remove the filter (Fig.10/4) and wash under a tap. Allow to dry thoroughly before replacing back into the machine.

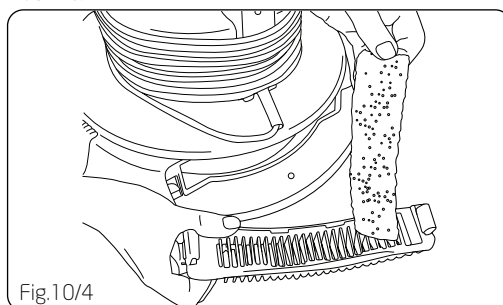


Fig.10/4

3. Once dry, put the filter back into the housing and place back into the machine.

Cleaning the Pleated Pre-Motor Filter Assembly

1. Remove the filter by twisting gently. This will release it from the motor housing (Fig.10/5).

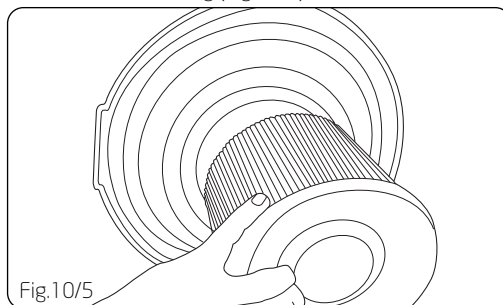


Fig.10/5

2. Clean by tapping it against the side of a bin or by brushing gently.

NOTE: Do not wash this filter. Replace every 9-12 months as needed.

11. Troubleshooting

⚠ WARNING: To reduce the risk of personal injury, unplug the vacuum cleaner before performing maintenance or troubleshooting checks.

PROBLEM: The cleaner won't run.

Cause: Not properly plugged into electrical outlet.

Solution: Plug in firmly.

Cause: No electricity in electrical outlet.

Solution: Check fuse or breaker.

Cause: On/off switch not turned on.

Solution: Push on/off switch to 'on'.

Cause: Blown fuse/tripped breaker.

Solution: Reset circuit breaker or replace fuse.

PROBLEM: Cleaner won't pick up/loss of suction.

Cause: Dust bag not installed correctly.

Solution: Review dust bag removal and replacement.

Cause: Dust bag full or blocked.

Solution: Replace dust bag.

Cause: Clogged filter.

Solution: Remove filter and clean.

Cause: Blockage in hose.

Solution: Disconnect hose, remove the obstruction then re-fit.

PROBLEM: Cleaner/accessories won't pick up.

Cause: Accessories not connected properly.

Solution: Refer to page 8 for fitting information.

Cause: The hose is clogged.

Solution: Remove hose and tools. Remove obstruction.

12. Technical Specification

Voltage:	220-240V ~50Hz
Wattage:	1300W
Capacity:	Clean water tank - 4 litres
	Dirty water tank - 4 litres
Cord length:	7.5m
Weight:	7.7kg

Subject to technical change without notice.



This page has been left intentionally blank.

www.vax.co.uk

This page has been left intentionally blank.

This page has been left intentionally blank.



EEC STATEMENT OF COMPLIANCE

Manufacturer/EEC importer: Vax Limited, hereby on our own responsibility, declare that the product 6121/6121C Multifunction is manufactured in compliance with the following Directives:

Safety: 2006/95/EC Low Voltage Directive

EMC: 2004/108/EC Electromagnetic Compatibility Directive



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Vax 6121

Описание



Оформление кредита
онлайн за 2 минуты



Доставка заказов
по всей России



Круглосуточная
служба поддержки



Оплата заказа любым
удобным способом

 **сотмаркет**

[О компании](#)

[Доставка и оплата](#)

[Новинки](#)

[Отзывы](#)

[Акции и скидки](#)